



Instructions for changing IP address for Remote Desktop client.

- 1) Power up the FLASH tester and attach a USB keyboard. A USB mouse is optional.
- 2) If the keyboard has a “Windows” key press it to bring up the Start Menu. If the keyboard does not have a “Windows” key press the Ctrl-Esc keys.
- 3) Select the All Programs menu item, then select the NetSupport icon, then the NetSupport Configurator icon. This will bring up the client’s configuration windows. Click the Basic button.

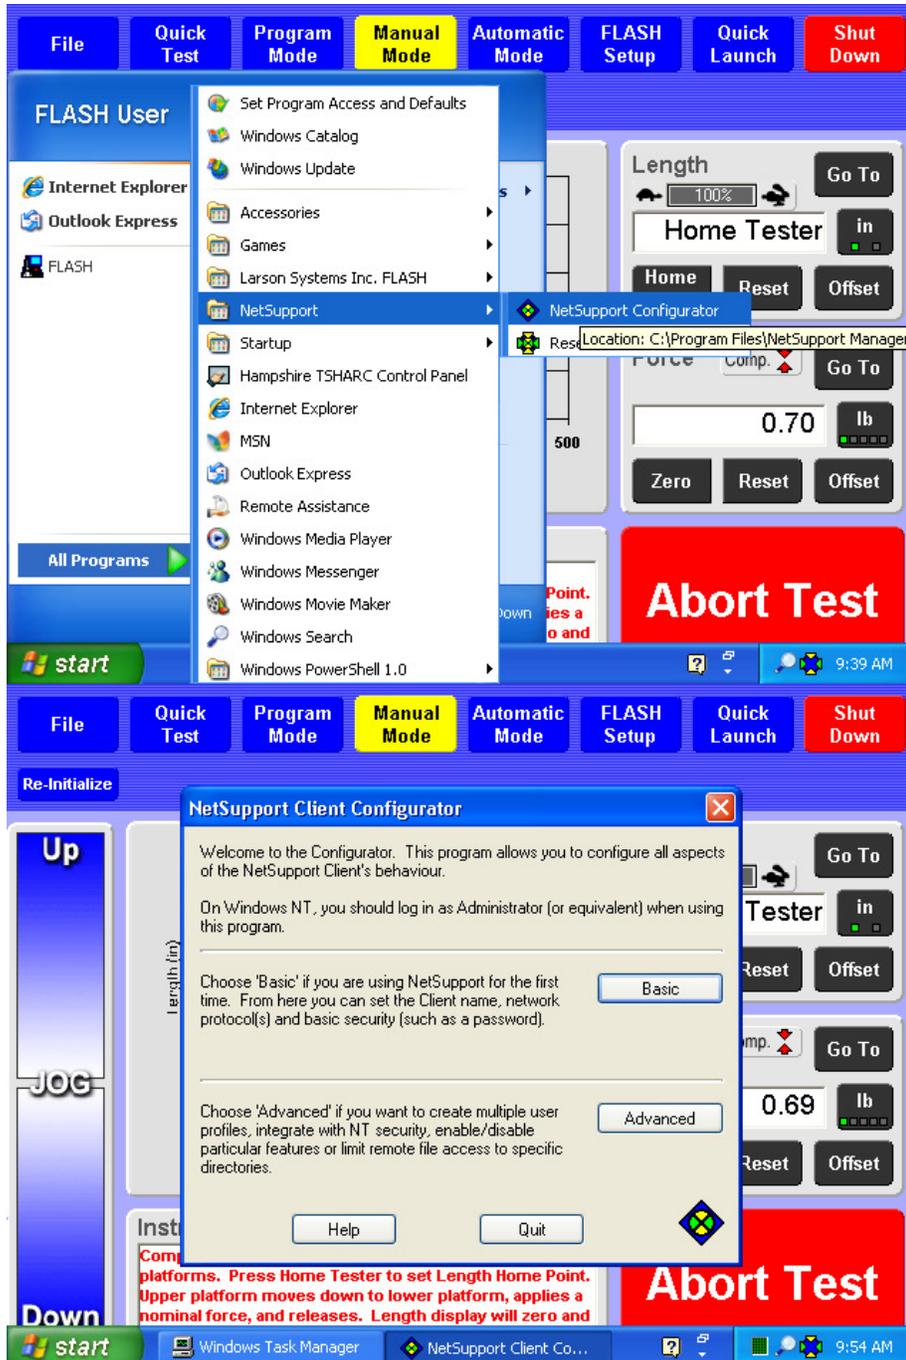

4) Select the HTTP item under the Connectivity tree list.

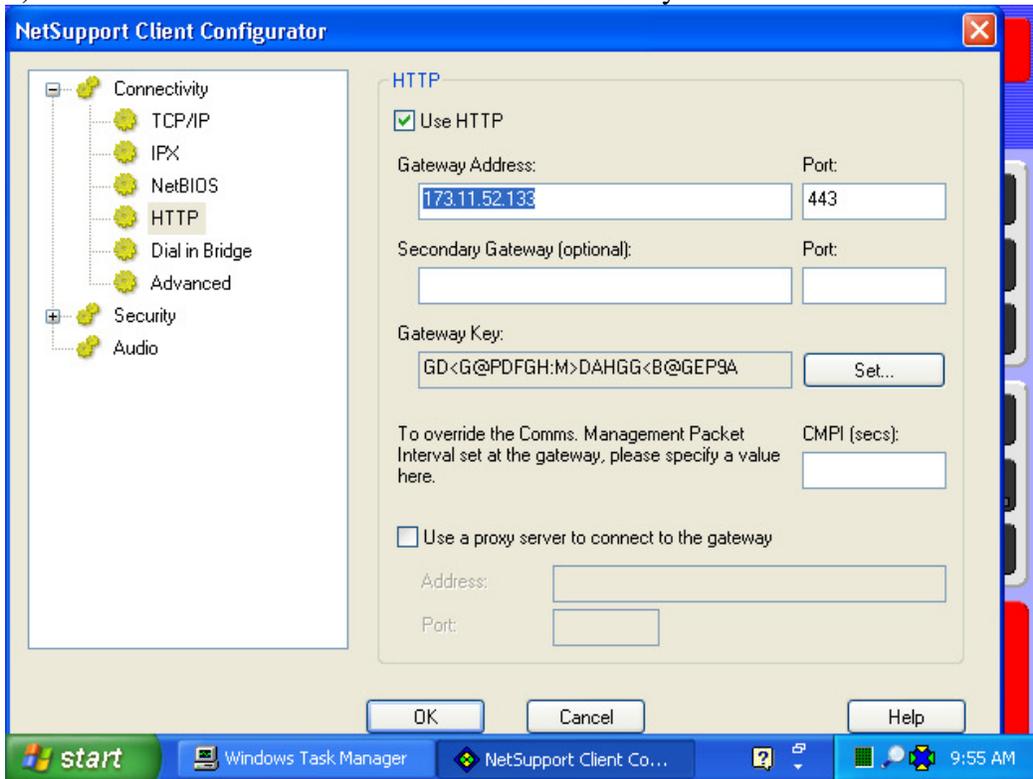

5) Change the Gateway Address to 173.11.52.133 or address given by LSI personnel.

6) Click the OK button.

7) The Client will ask to be restarted. Click Yes.



8) Reboot the Tester.